

Installation Procedure

Sound Deflector Panels

1. Measure and mark the ceiling area where the panel is to be installed.
2. Make holes using a 10.5 mm drill bit on the marked positions of ceiling and panel.
3. Screw the provided anchor bolts to the ceiling and to the panel.
4. Install the panels using the cable and clamp arrangement.



Figure 1

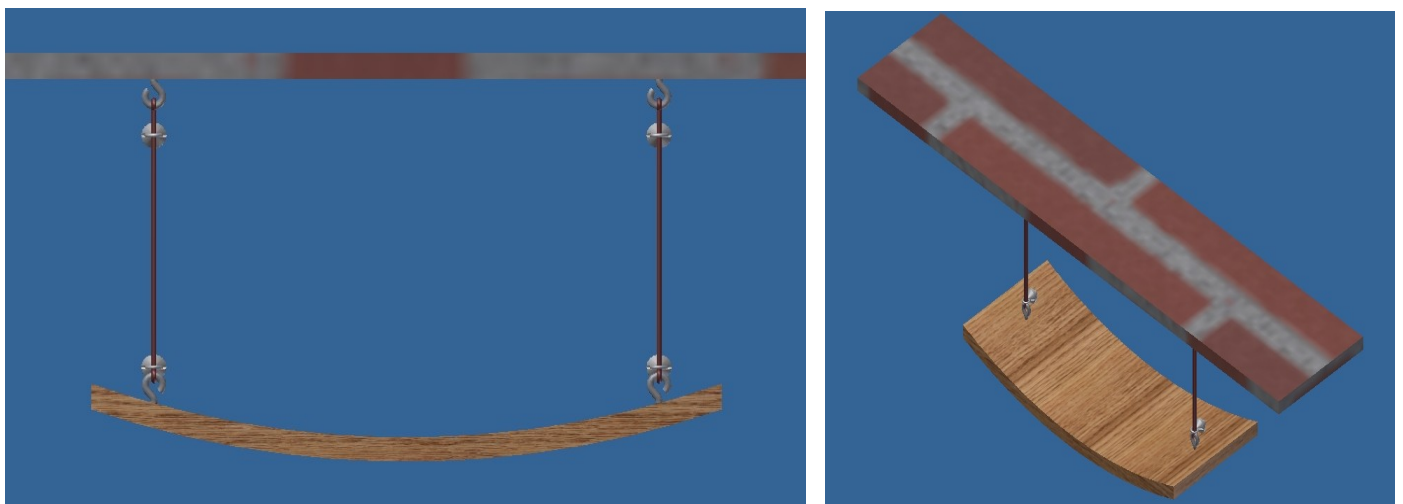


Figure 2