

**Installation Procedure**

**Suspended Absorbers**

1. Measure and mark the ceiling area where the panel is to be installed.
2. Make holes using a 10.5 mm drill bit on the marked positions of ceiling and panel.
3. Screw the provided anchor bolts to the ceiling and panel.
4. Install the panels using the cable and clamp arrangement as shown in the Figure (1& 2)

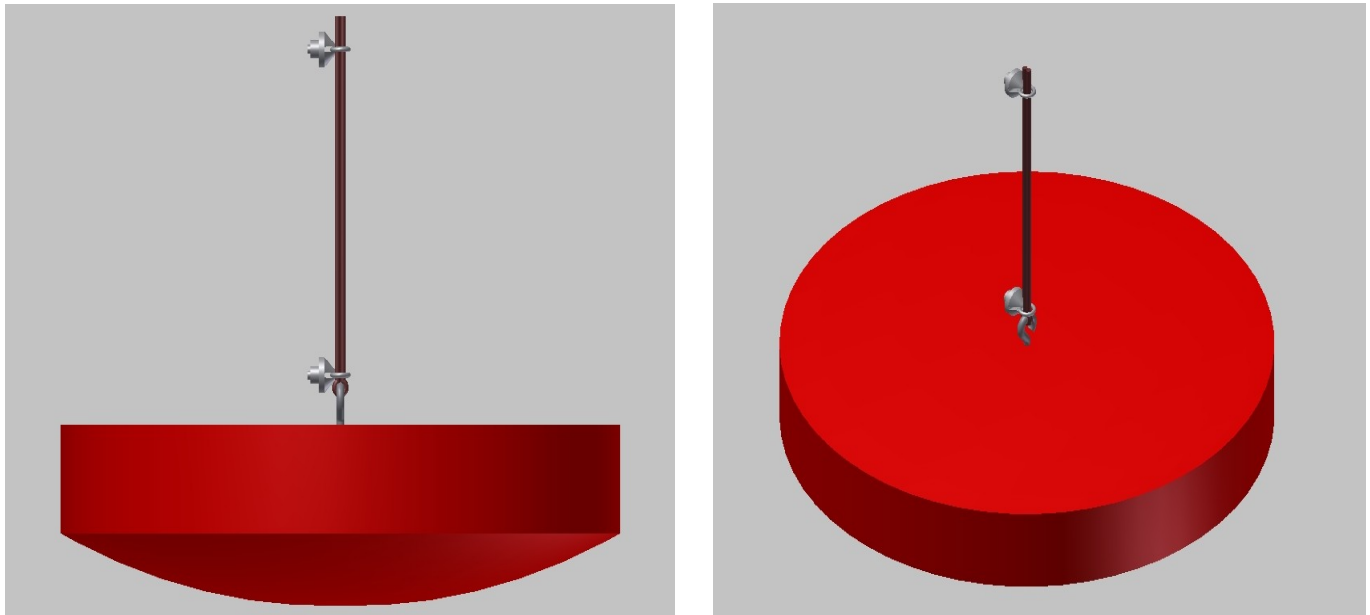


Figure 1

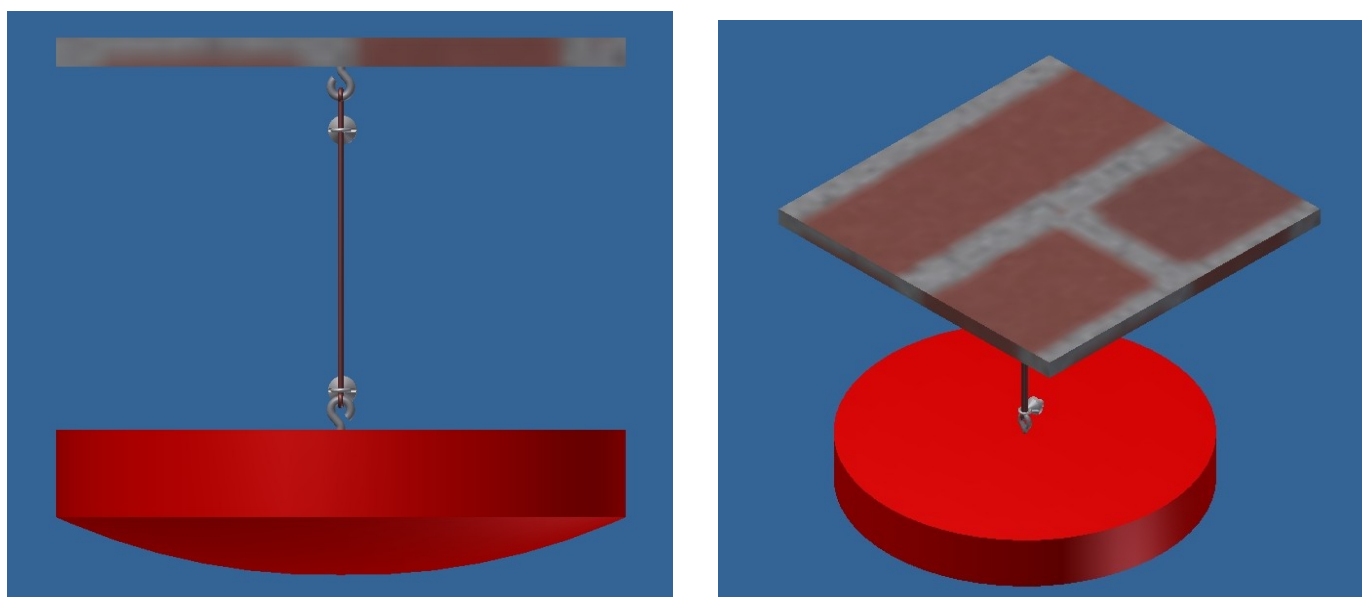


Figure 2